



Installation In 200-400 mm Wide Cabinets:

Step 1: Mark the mounting holes on the bottom board of the cabinet as shown.


柜体宽度W(mm)	尺寸D(mm)
200	41.5
250	81.5
300	126.5
350	176.5
400	241.5

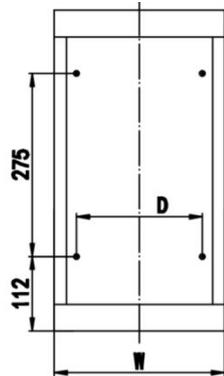

Step 2: Fix the base frame on the bottom board with screws as shown.

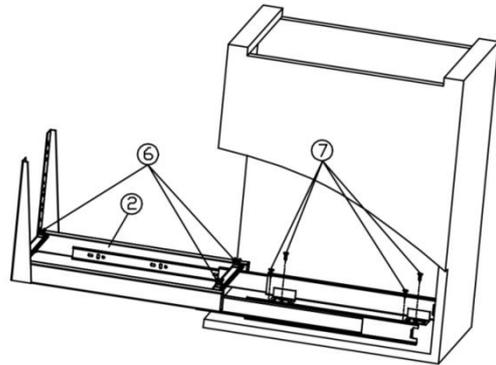


Step 3: Mark the mounting holes on the cabinet door as shown.

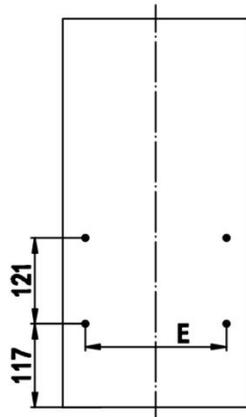

柜体宽度(mm)	尺寸E(mm)
200	135
250	175
300	220
350	270
400	335

Step 4: Fix the base frame on the door with screws.

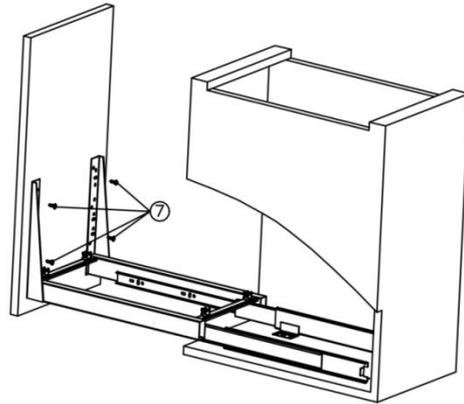

Step 5: Install the organizer frame on the base frame as shown. And install other accessories on the corresponding positions of the organizer frame.

