



【INSTALLATION GUIDE】

Step 1: Choose the cabinet with proper width.

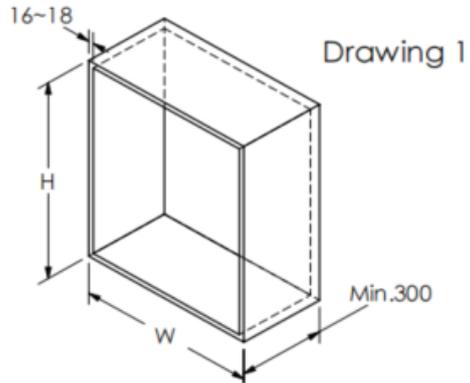

Step 2: Drill 4 holes on both sides of the cabinet with a diameter of $\Phi 10$ and a depth of 7-9mm.

A=275mm B=300mm (reference value)

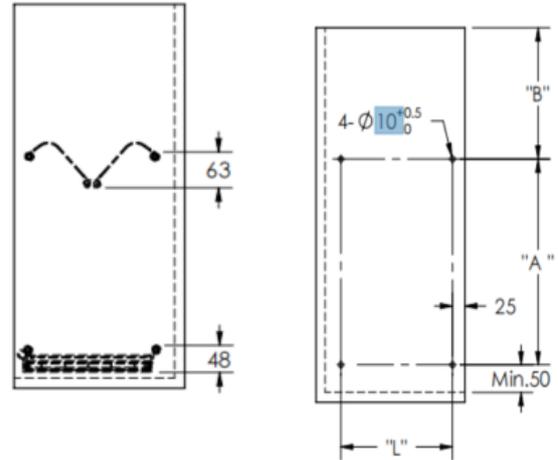

Step 3: Install the upper and bottom dish racks on the cabinet respectively as shown below.

