


## [INSTALLATION GUIDE]

### STEP 1

Holding the lorning Board base in place in the desired location and mark the 4 Holes.


The installation position needs to be 0-1.57" (0-4cm) away from the edge of the cabinet.

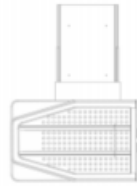

### STEP 2

Drill the 4 screws to finish.

Using Instruction as below:

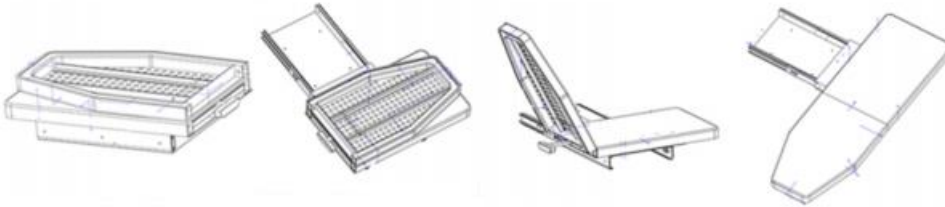

It can be rotated within 180 degree

