



INSTALLATION GUIDE


Step 1: Mount the bottom frame and casters, and fix the 4 brackets with 4 M6 nuts.

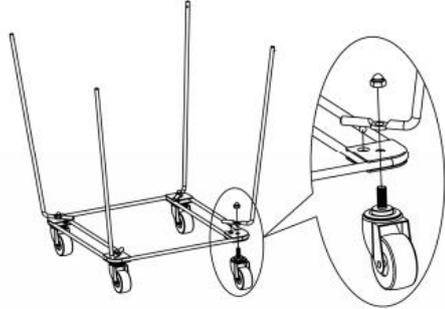


Step 2: Attach the four plastic parts to each corner of the top frame.

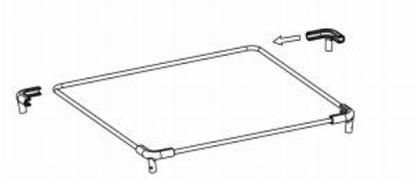

Step 4: Connect the assembled top frame to the brackets.

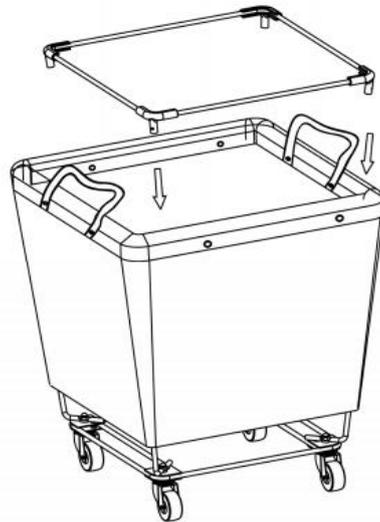

Step 3: Attach the cloth cover to the brackets.

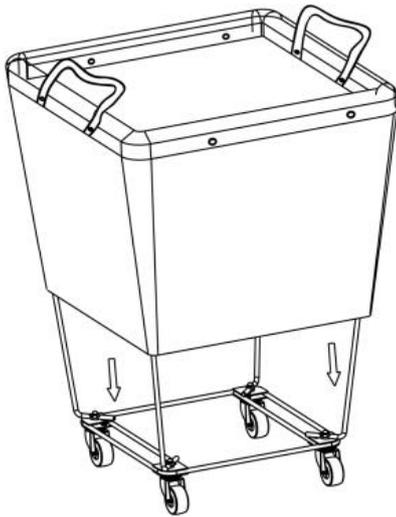

Step 5: Fix the top frame to the bracket with screws.

