
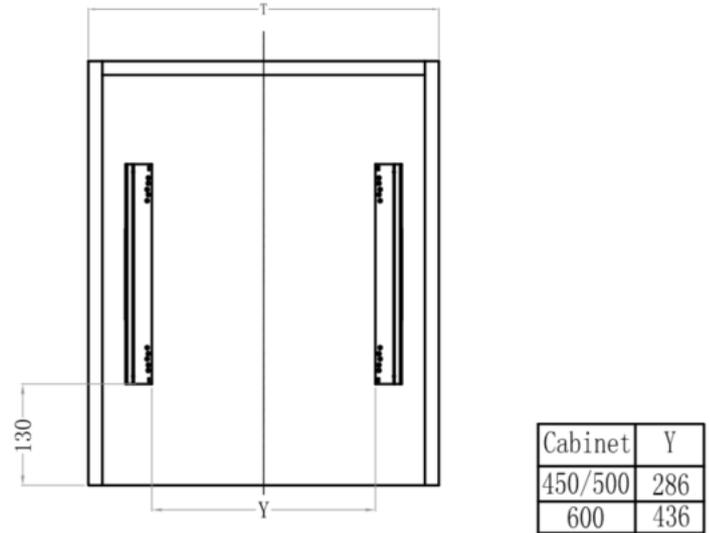



INSTALLATION GUIDE

Step1: As the size revealed in the picture below, drill 4 small holes Ø2.5mm respectively on the top cabinet panel.

Step2: As the size revealed in the picture below, drill 12 small holes Ø2.5 respectively on and bottom cabinet panel.

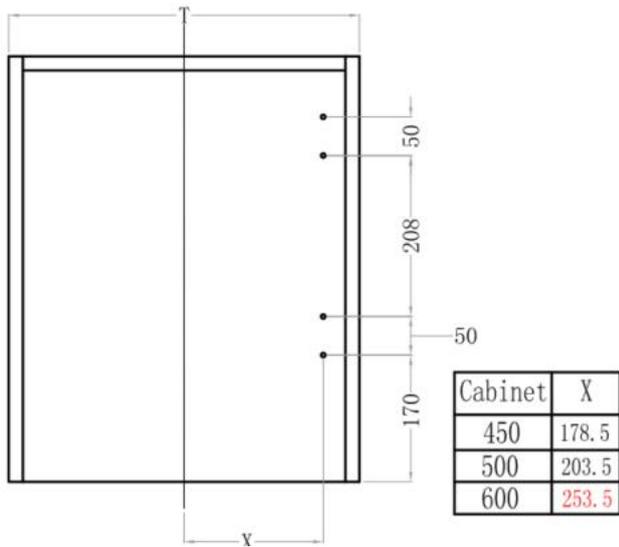


Step3: Install L-shaped iron.

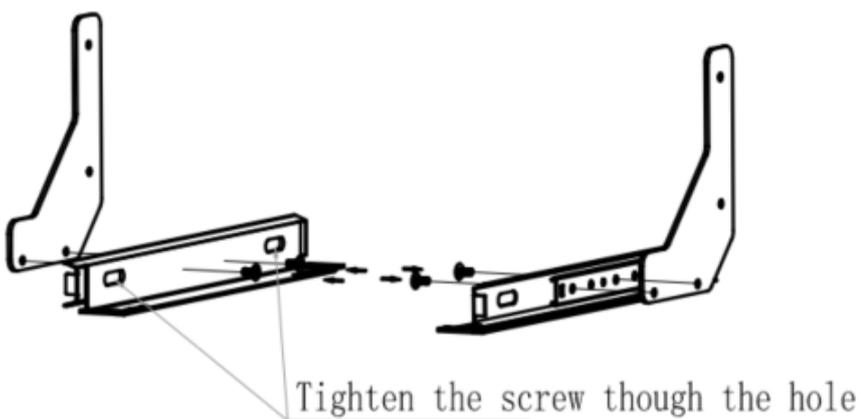


Step4: Install slip frame.

A: Screw the loaded screws out of the slip frame, attach L-shaped bracket with castors into the frame tube as illustrated in the picture and screw up the screws but it is not necessary to tighten them.


B: Fix the frame installed in step A to the L-shaped iron sheets with 4 screws M6*25.

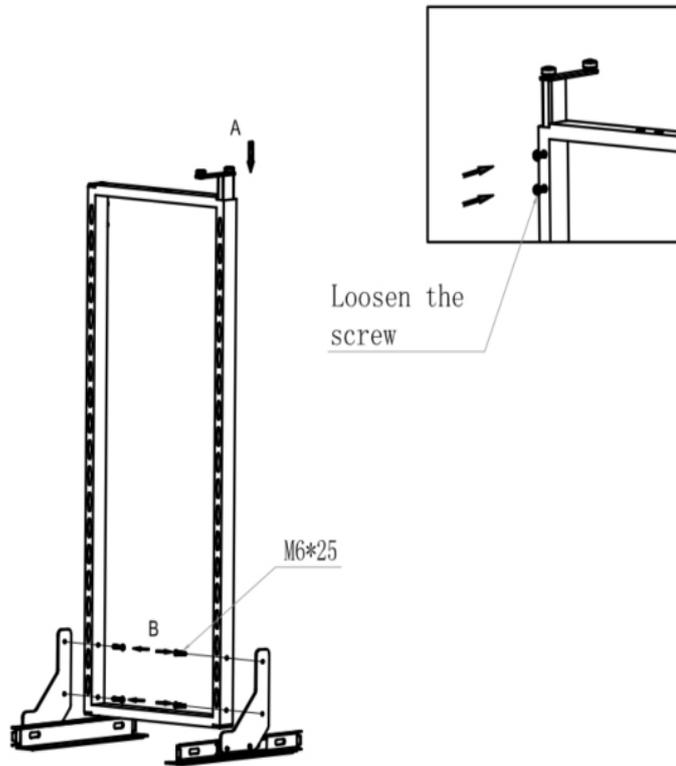


Step5: Fix the runners onto the bottom frame panel with 12 pcs tapping screws ST3.5*16

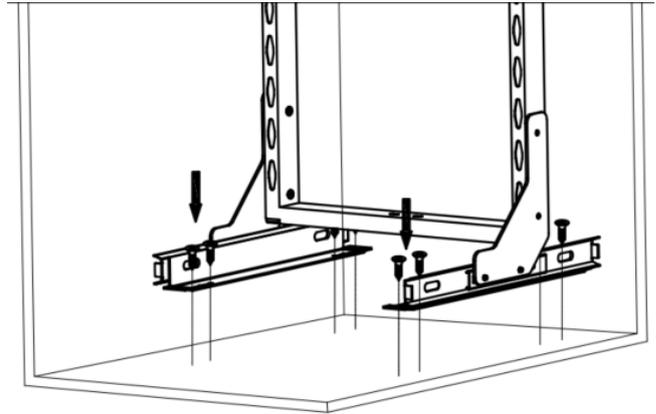


Step6: Fix the U-iron onto the top cabinet panel with 4 tapping screws ST3.5*16

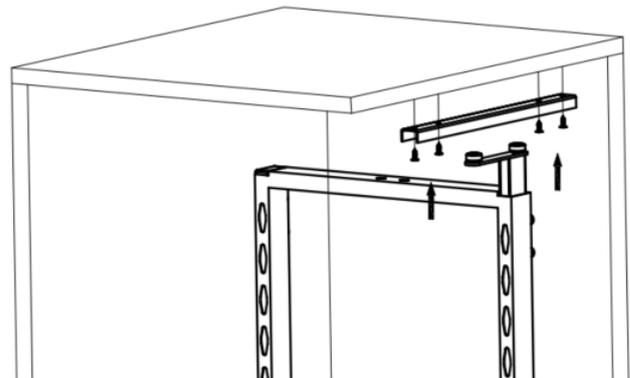


Step7: Adjust the L-shaped bracket with castors, make sure the castors are put into the U-shaped slot completely and tighten the screws with a screw reamer.

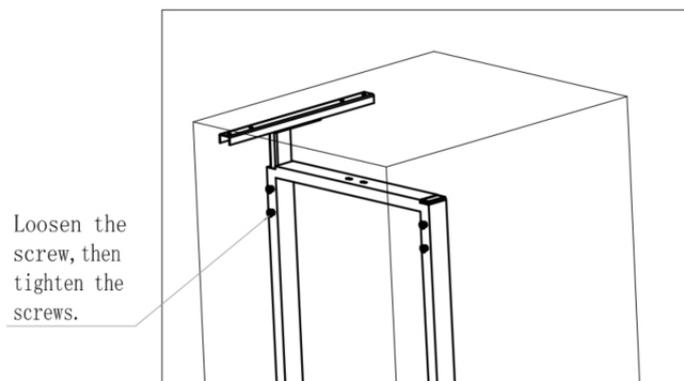


Step8: Install the runner protective cover.

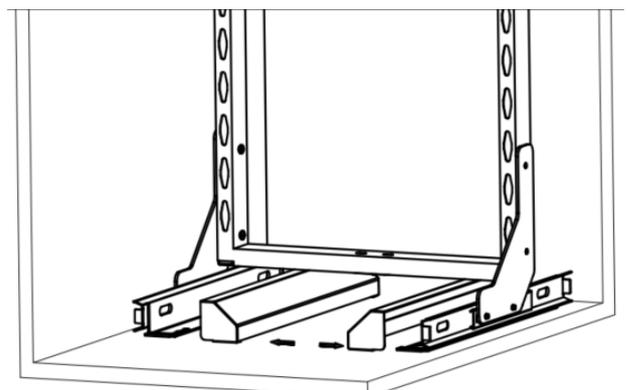

Step9: Install panel hangstrip

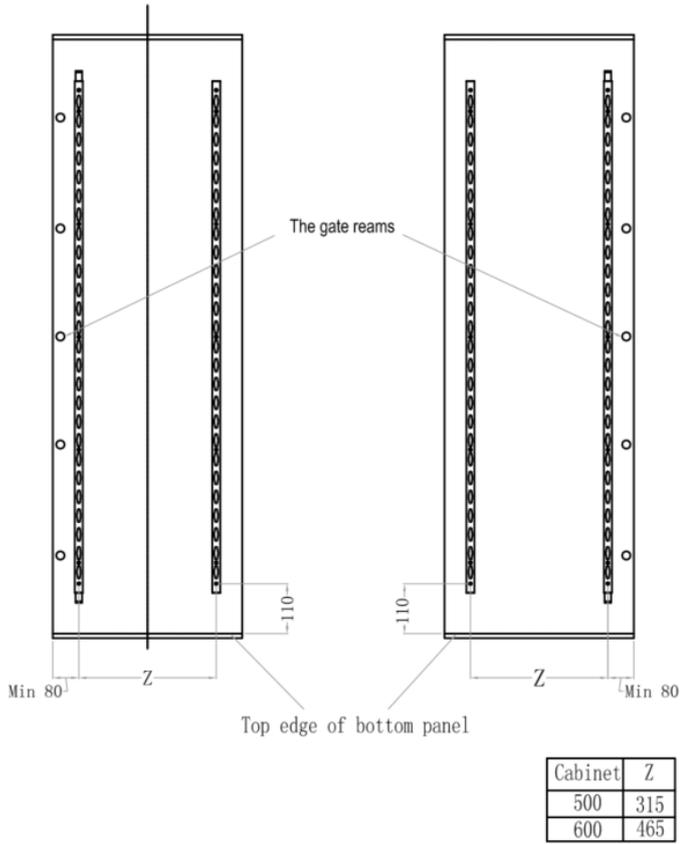

Step10: Screw the screws out of the connecting strip, as shown in the picture, connect the slip frame and the top of the panel hangstrip with the connecting strip (attention: the connecting strip has the differentiation from left and right), and tighten the screws.

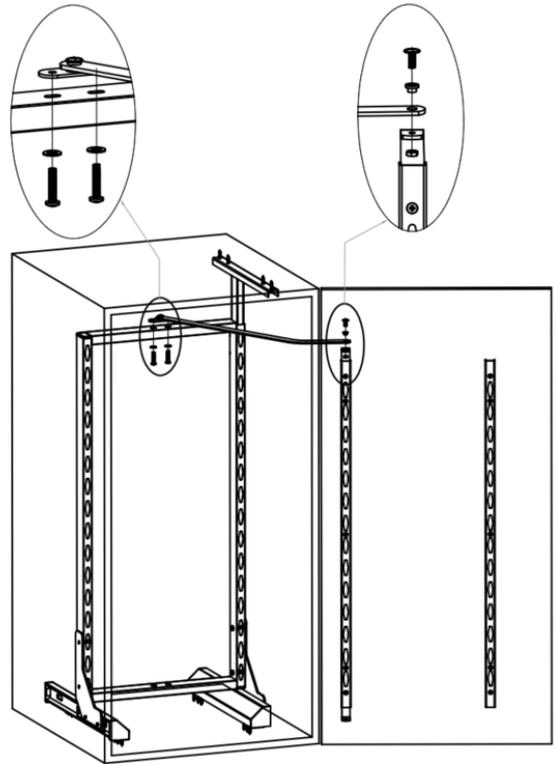

Step11: Screw the screws out of the connecting strip, as shown in the picture, connect the slip frame and the bottom of the panel hangstrip with the connecting strip (attention: the connecting strip has the differentiation from left and right), and tighten the screws.

