



Aluminium Walk In Closet

WARDROBE ACCESSORIES >>WALK IN CLOSET >>INSTALLATION INSTRUCTIONS


PREPARATION

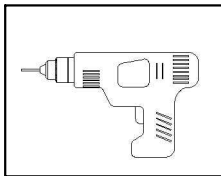


ELECTRIC DRILL

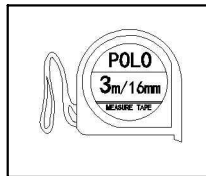

TAPE

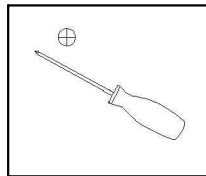

PHILLIPS DRIVER

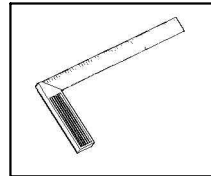

SQUARE

◆ Please prepare the above tools before installation.

MATERIALS



① Vertical Bearing Profile



② Shelves Holder



③ Shelves Holder Plug



④ Closet Beam Mount



⑤ Clothes Beam



⑥ Shelves Holder Mount



⑦ Adjustable Leg Base



⑧ U-Shaped Horizontal Profile



⑨ Wall Mount



⑩ Shoes Beam Mount



⑪ Shoes Beam



⑫ Profiles Angular Joint



BETTER VENACE, ELEGANT LIFE

www.venace.com


- ◆ Factory Supply
- ◆ Rapid Shipment
- ◆ Reasonable Price

- ◆ TÜV Certificate
- ◆ SGS Certificate
- ◆ APICS Certificate

Aluminium Walk In Closet

WARDROBE ACCESSORIES >>WALK IN CLOSET >>INSTALLATION INSTRUCTIONS

INSTRUCTION

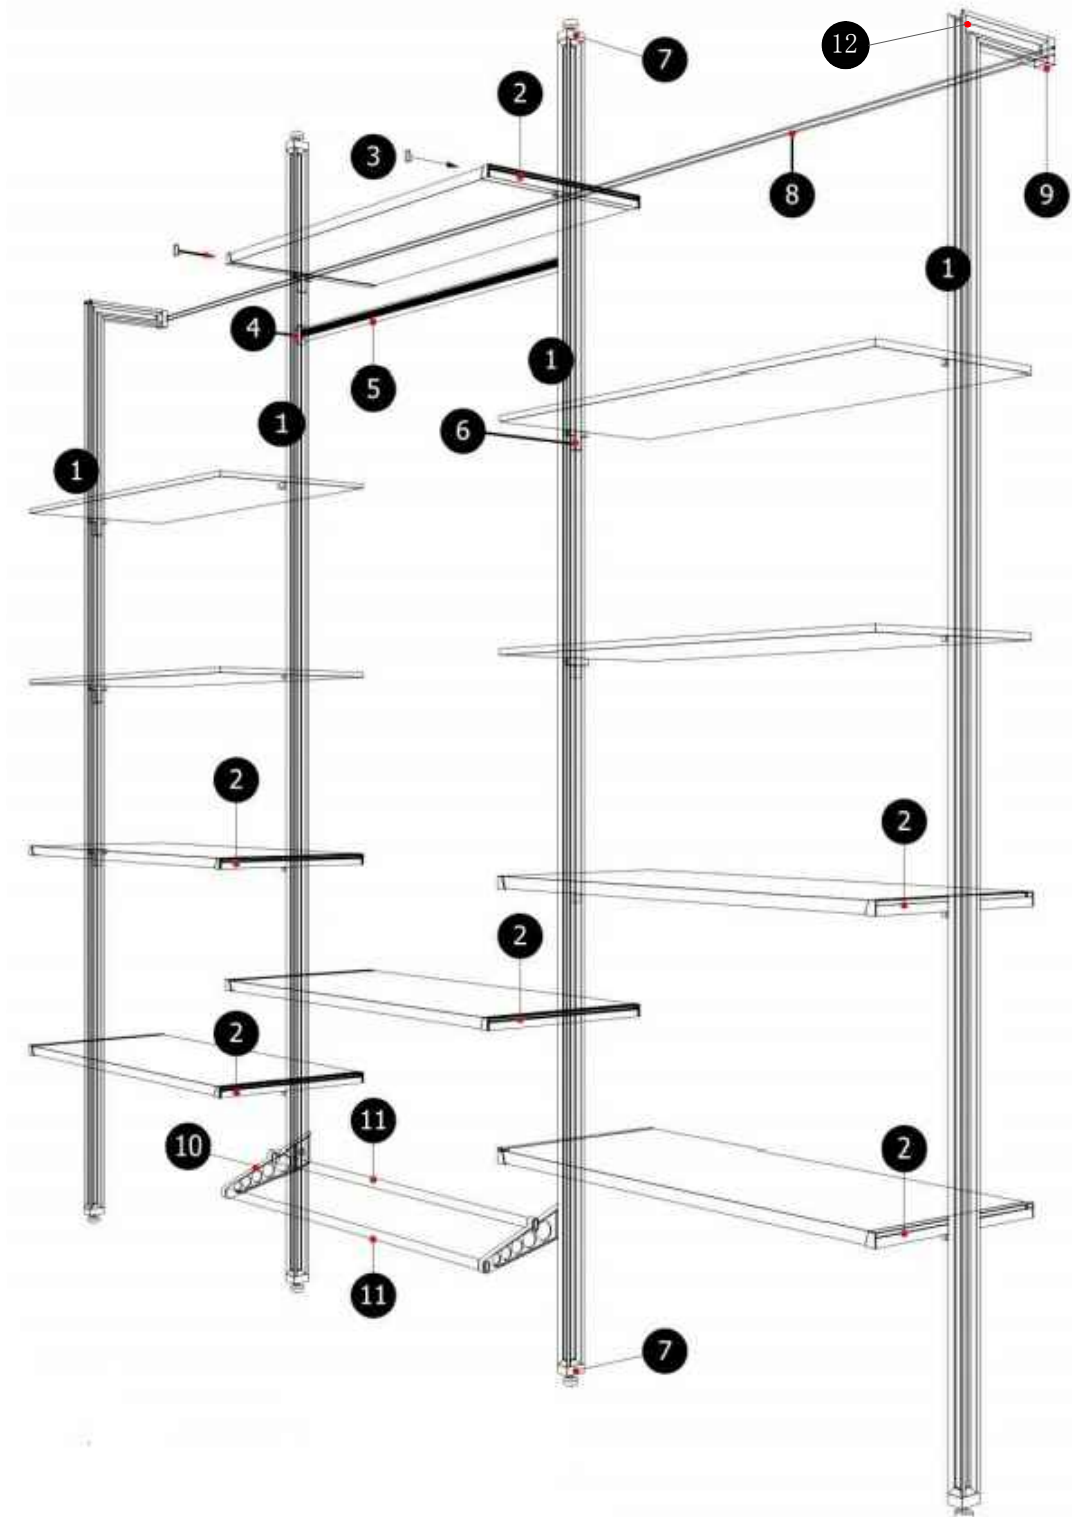


- ① Vertical Bearing Profile
- ② Shelves Holder
- ③ Shelves Holder Plug
- ④ Closet Beam Mount
- ⑤ Clothes Beam
- ⑥ Shelves Holder Mount
- ⑦ Adjustable Leg Base
- ⑧ U-Shaped Horizontal Profile
- ⑨ Wall Mount
- ⑩ Shoes Beam Mount
- ⑪ Shoes Beam
- ⑫ Profiles Angular Joint

Aluminium Walk In Closet

WARDROBE ACCESSORIES >>WALK IN CLOSET >>INSTALLATION INSTRUCTIONS

INSTRUCTION

FASTENING FLOOR - CEILING

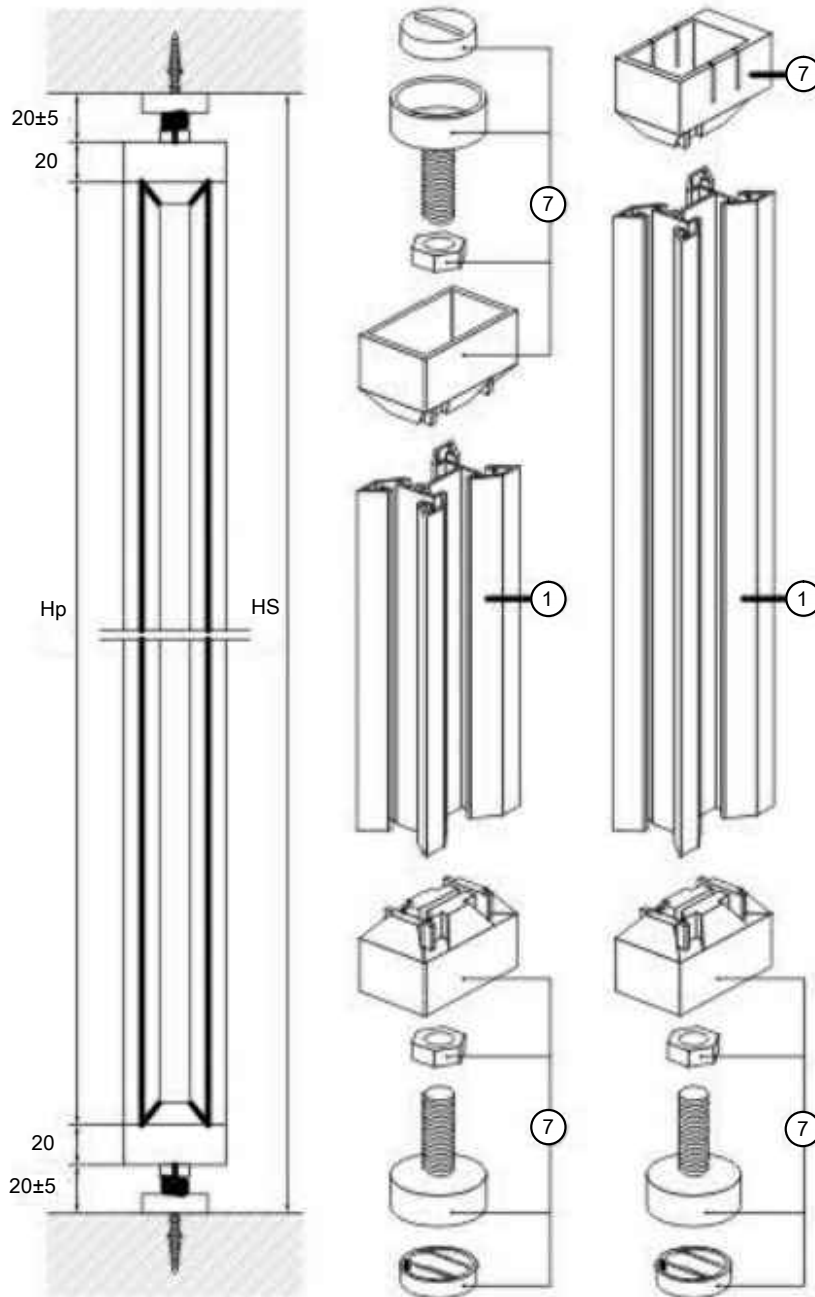

$$H_p = H_S - 90 \text{ mm}$$



BETTER VENACE, ELEGANT LIFE

www.venace.com

- ◆ Factory Supply
- ◆ Rapid Shipment
- ◆ Reasonable Price


- ◆ TÜV Certificate
- ◆ SGS Certificate
- ◆ APICS Certificate

Aluminium Walk In Closet


WARDROBE ACCESSORIES >>WALK IN CLOSET >>INSTALLATION INSTRUCTIONS

INSTRUCTION

FASTENING FLOOR - WALL


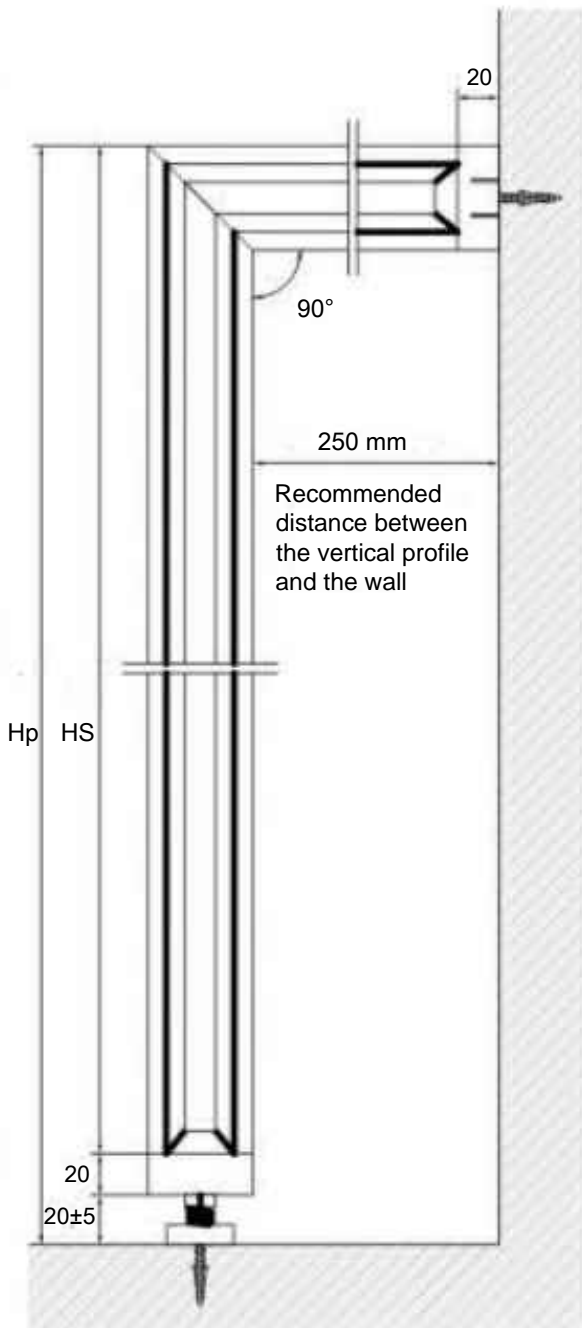


$H_p = H_S - 45 \text{ mm}$


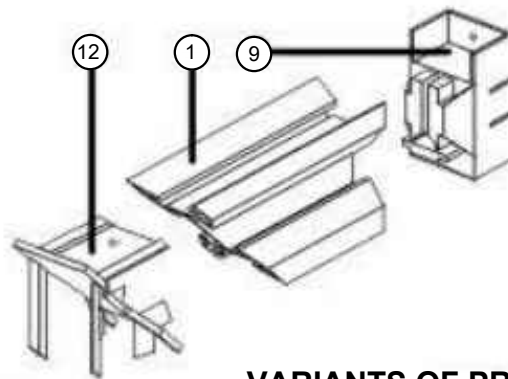


VARIANTS OF PROPS FASTENING

1. Installation of the prop using the prop leg 1 and the adjustment element.

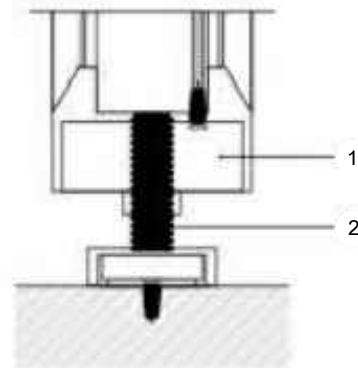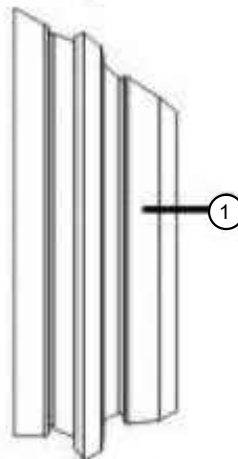

2. Installation of the prop using the prop leg 1.

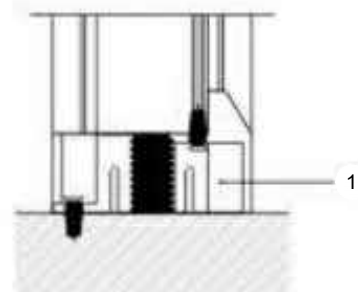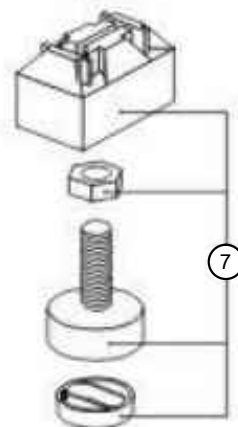

BETTER VENACE, ELEGANT LIFE

www.venace.com

- ◆ Factory Supply
- ◆ Rapid Shipment
- ◆ Reasonable Price


- ◆ TÜV Certificate
- ◆ SGS Certificate
- ◆ APICS Certificate

Aluminium Walk In Closet


WARDROBE ACCESSORIES >>WALK IN CLOSET >>INSTALLATION INSTRUCTIONS

INSTRUCTION


SHOES SHELVES ASSEMBLING

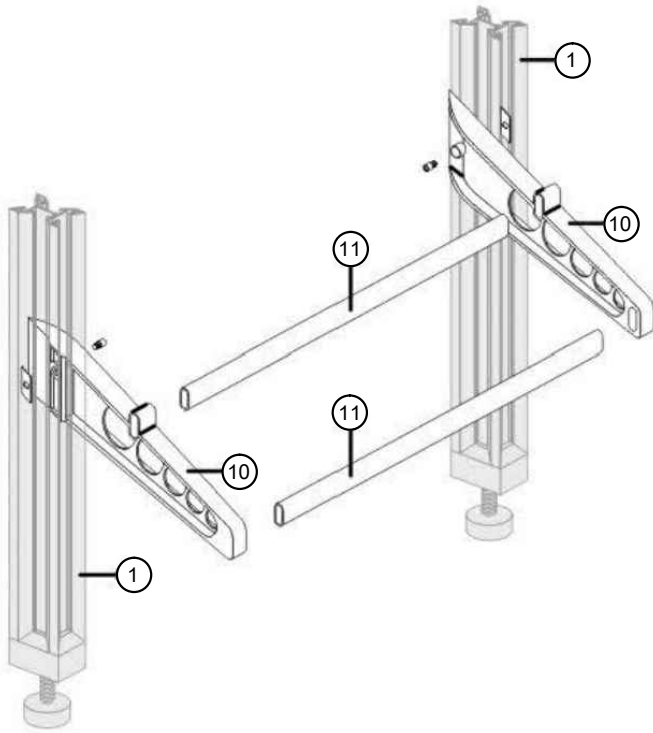

The shoes beam fastening height is adjusted if necessary.

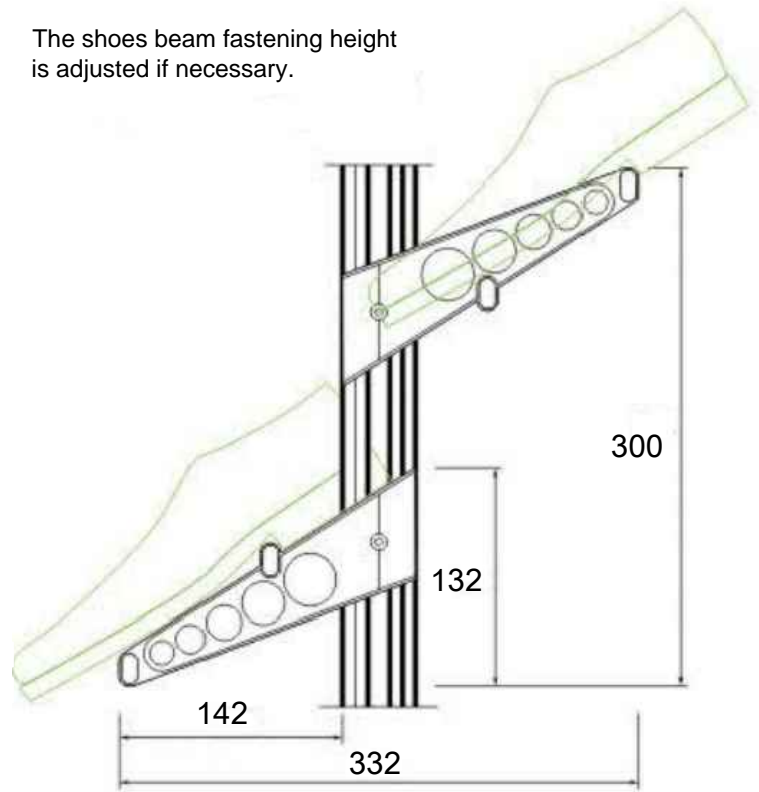

SHOES BEAM CALCULATION

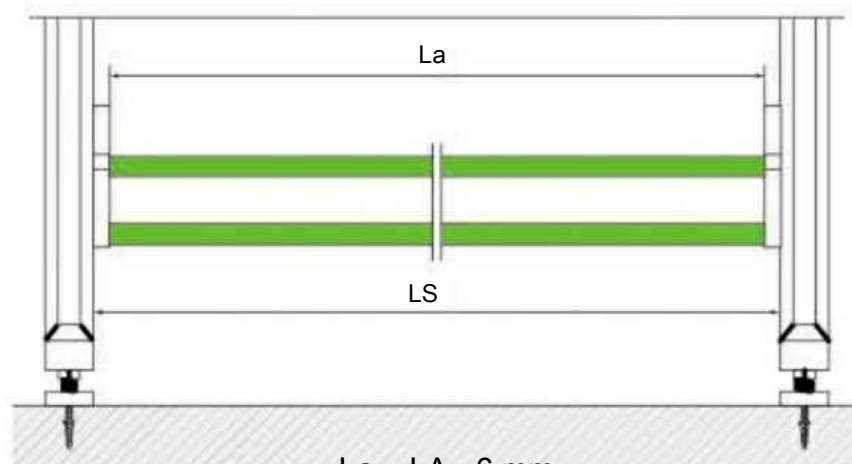


Aluminium Walk In Closet


WARDROBE ACCESSORIES >>WALK IN CLOSET >>INSTALLATION INSTRUCTIONS

INSTRUCTION

USE OF HORIZONTAL U-SHAPED PROFILE

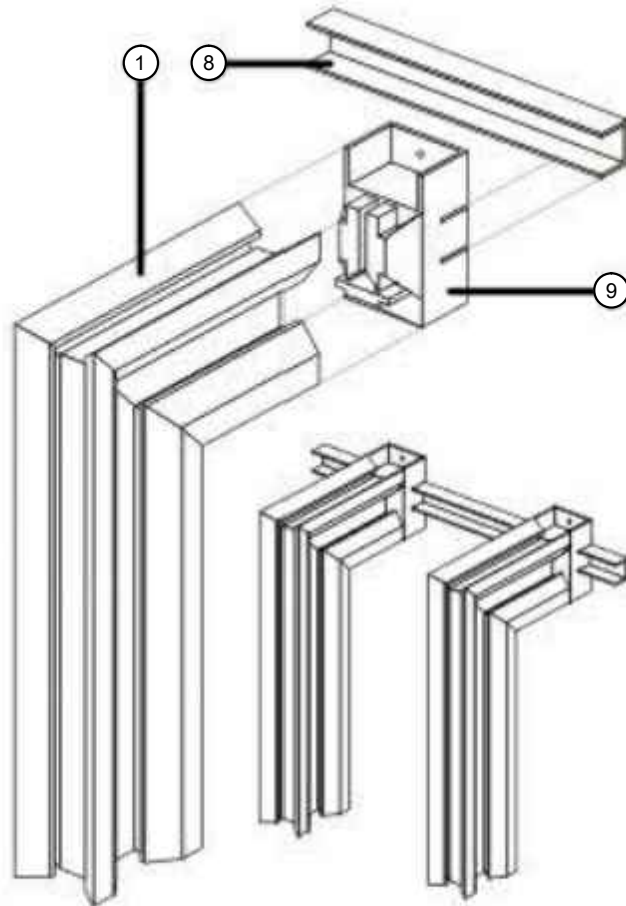

VERTICAL CROSS-SECTION P-SHAPED PROFILE

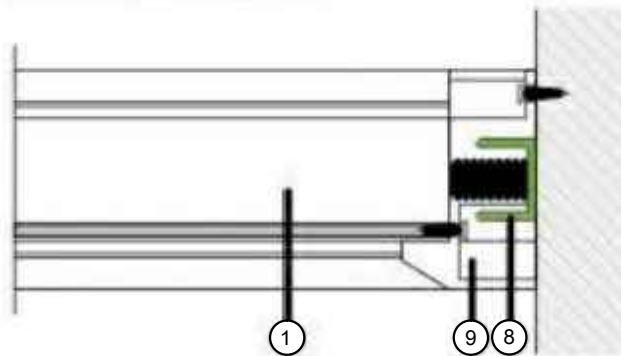

BETTER VENACE, ELEGANT LIFE

www.venace.com

- ◆ Factory Supply
- ◆ Rapid Shipment
- ◆ Reasonable Price


- ◆ TÜV Certificate
- ◆ SGS Certificate
- ◆ APICS Certificate

Aluminium Walk In Closet


WARDROBE ACCESSORIES >>WALK IN CLOSET >>INSTALLATION INSTRUCTIONS

INSTRUCTION

SHELVES ASSEMBLING

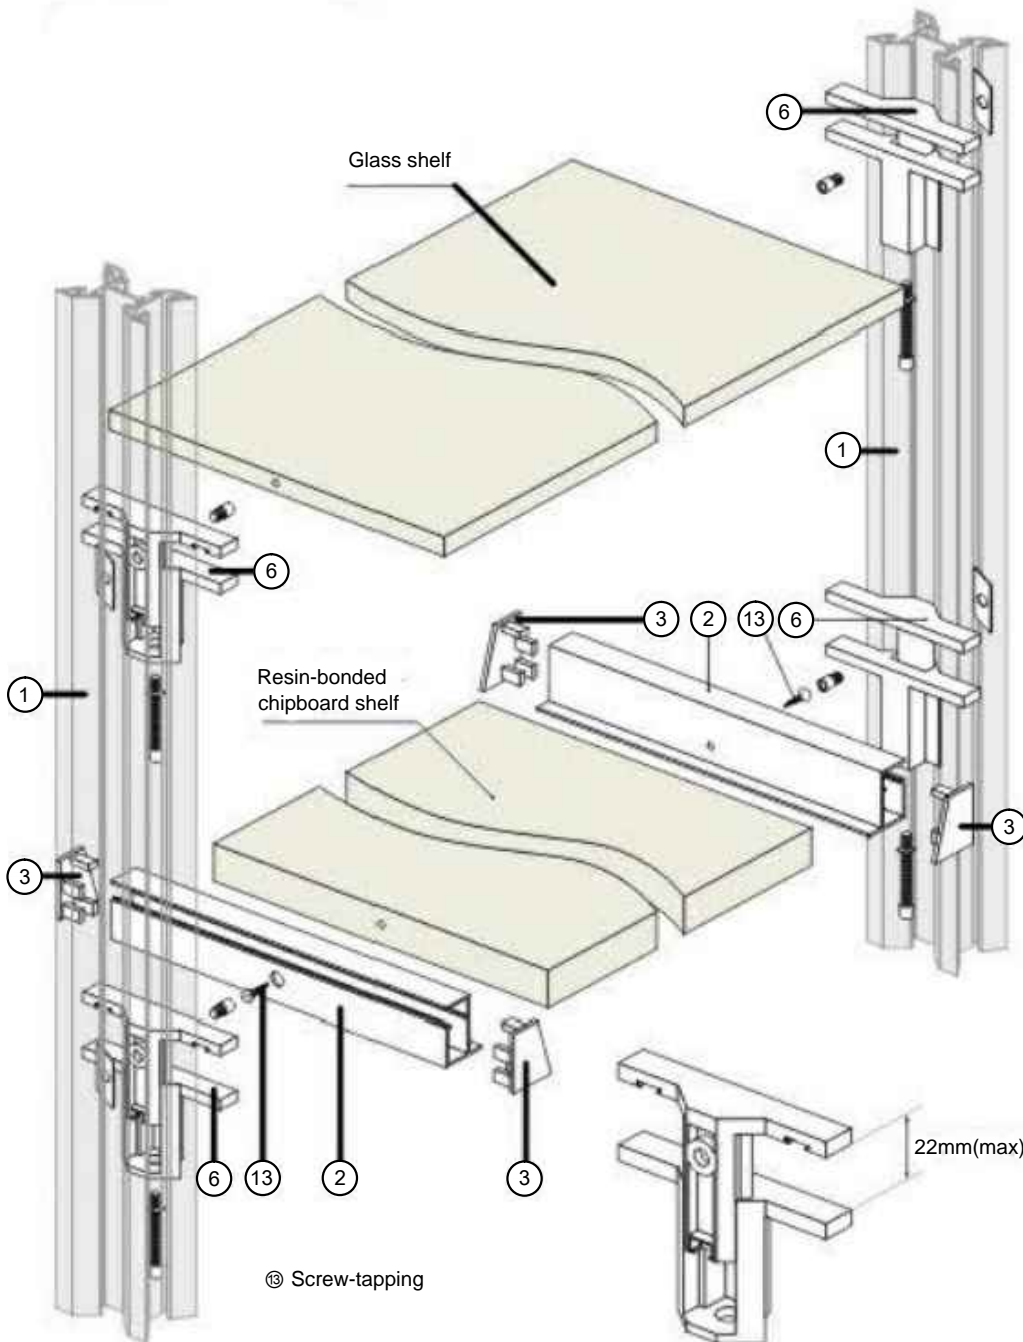

CALCULATION OF THE SHELVES LENGTH

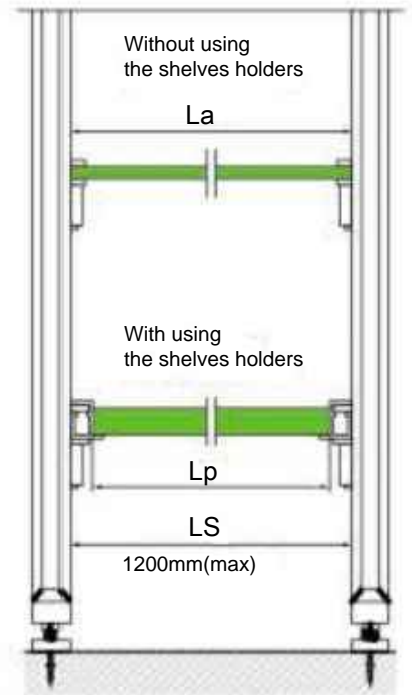

$$La = LS$$

$$Lp = LS - 26 \text{ mm}$$


- ◆ Factory Supply
- ◆ TÜV Certificate
- ◆ Rapid Shipment
- ◆ SGS Certificate
- ◆ Reasonable Price
- ◆ APICS Certificate

Aluminium Walk In Closet

WARDROBE ACCESSORIES >>WALK IN CLOSET >>INSTALLATION INSTRUCTIONS

INSTRUCTION

ASSEMBLING THE DRAWERS AND THE CLOTHES BEAM

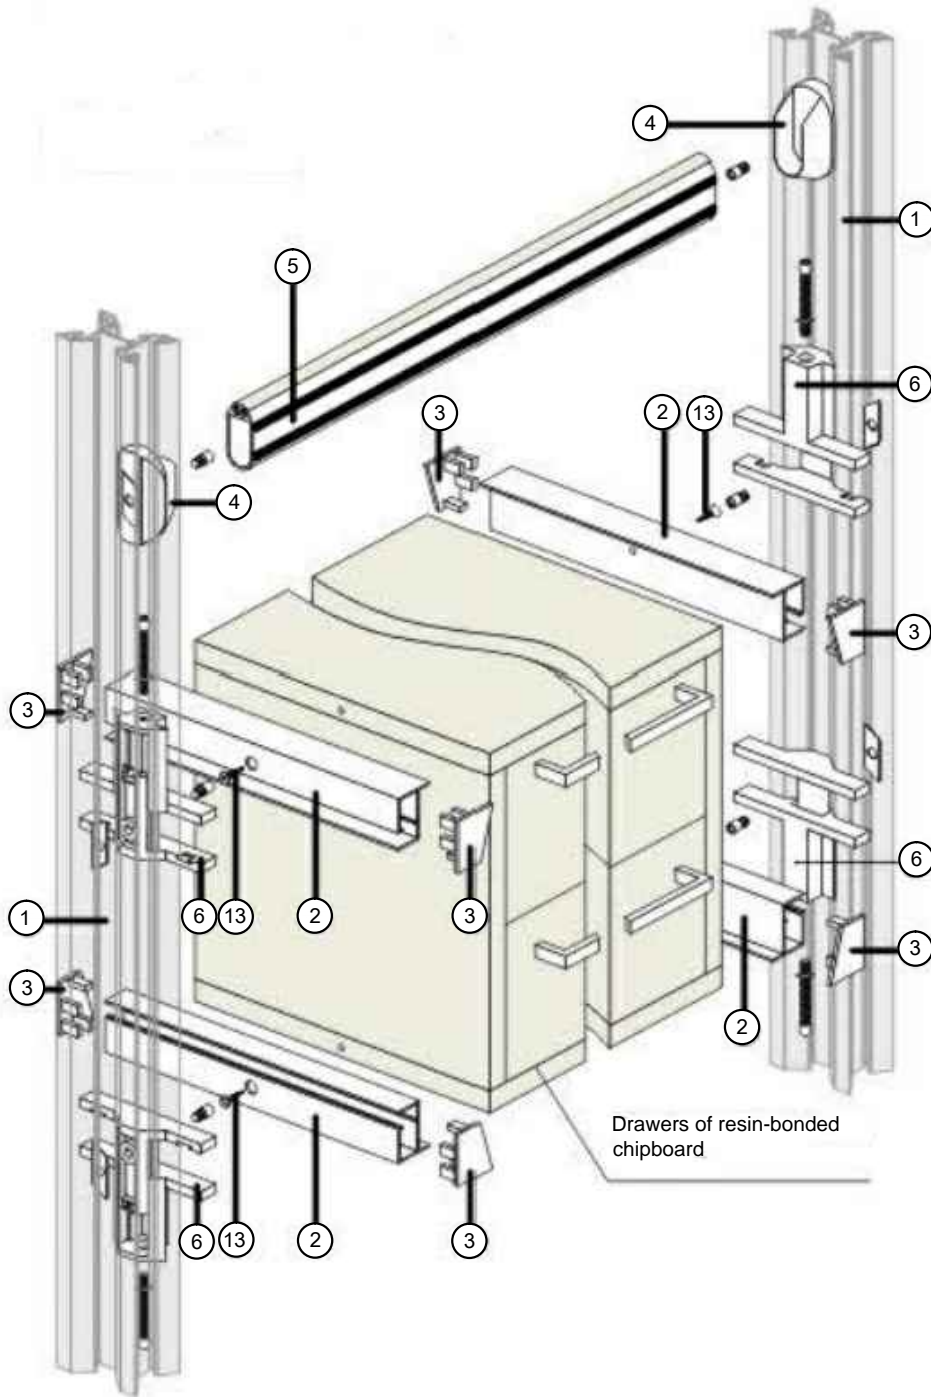

BETTER VENACE, ELEGANT LIFE

www.venace.com



- ◆ Factory Supply
- ◆ Rapid Shipment
- ◆ Reasonable Price
- ◆ TÜV Certificate
- ◆ SGS Certificate
- ◆ APICS Certificate

Aluminium Walk In Closet


WARDROBE ACCESSORIES >>WALK IN CLOSET >>INSTALLATION INSTRUCTIONS

INSTRUCTION

POSITIONING OF THE CLOTHES BEAM AS TO THE HEIGHT

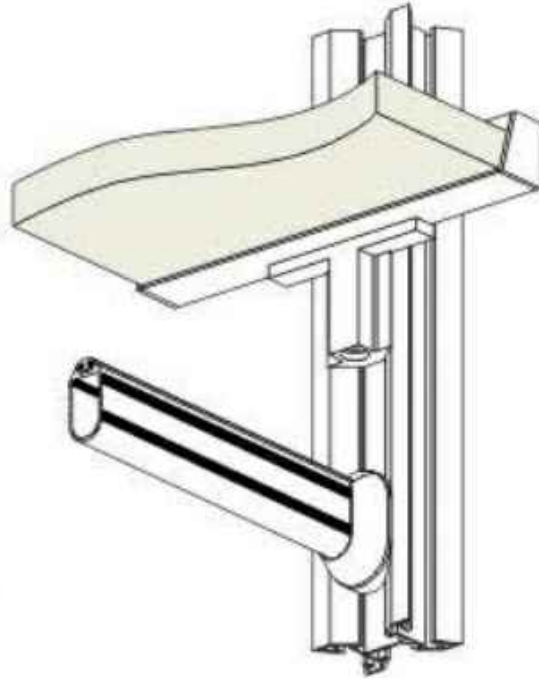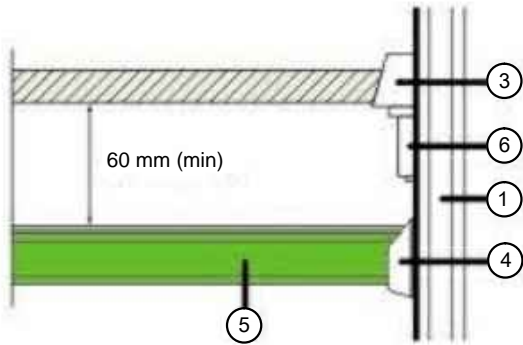


DRAWERS LENGTH CALCULATION

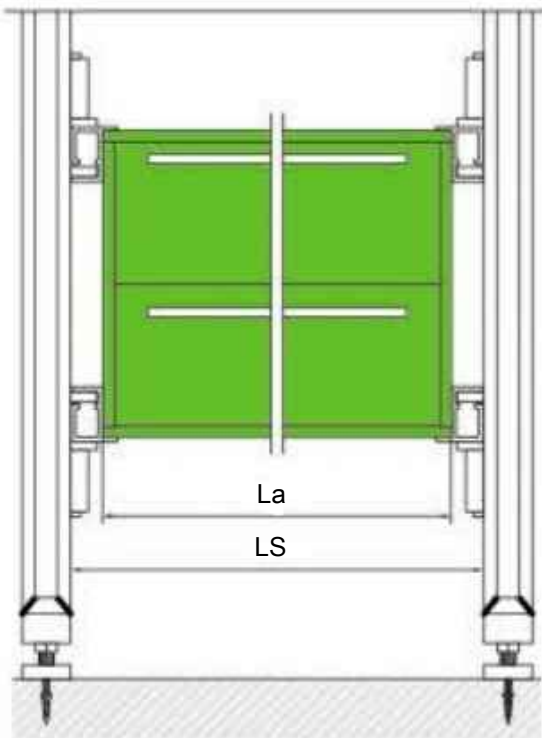

$$La = LS - 26 \text{ mm}$$

CLOTHES BEAM LENGTH CALCULATION

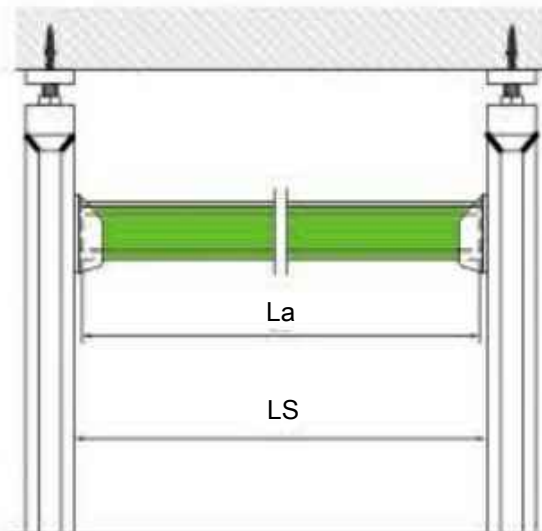

$$La = LS - 4 \text{ mm}$$



BETTER VENACE, ELEGANT LIFE

www.venace.com

- ◆ Factory Supply
- ◆ TÜV Certificate
- ◆ Rapid Shipment
- ◆ SGS Certificate
- ◆ Reasonable Price
- ◆ APICS Certificate